


SITEDRAIN STRIP

INSTALLATION GUIDE

awd-usa.com | 800.242.WICK (9425)

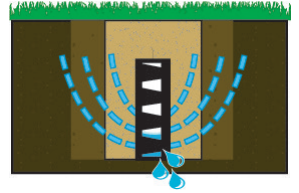

SITEDRAIN Soil Strip Drain - Trench

1. TRENCHING

Dig a 2-4" wide trench using a standard trenching machine, available at local rental outlets. The trench should be approximately 3" deeper than the height of the drain - 9" for 6" tall strip drain.

2. DRAIN INSTALLATION

Place the strip drain oriented vertically against the side of the bottom of the trench. If both subsurface and surface water collection is desired, backfill trench with sand or drainage aggregate and compact. If primarily subsurface drainage is desired, backfill trench with native soil and compact. A minimum of 3" of backfill material should cover the top edge of the drain to protect the drain from UV exposure, aerators and other landscape equipment. Reference Trench -1.

3. SPLICING DRAIN

Strip drains can be spliced together by one of the following methods.

- Peel back the filter fabric to expose the first 2 rows of dimples on both ends to be connected. Securely interlock exposed dimples, tapping in place with rubber mallet if needed. Overlap filter fabric flaps and secure joint with AWD Fitting & Joint Tape*. Reference Splice - 3A
- Splice Fittings are available for 6" strip drains. Slide one end of drain into each side of the connector. Secure fitting to strip drain using AWD Fitting & Joint Tape. Reference Splice - 3B


4. TEE CONNECTORS (6" Strip Drain)

Strip drains can be installed with branch lines to cover larger surface areas. Tee connectors are used to join straight and branch lines of strip drain together. Place the end section of each branch line 2 inches into the tee connector and secure with AWD Fitting & Joint Tape. Use the stop guide lines on the fitting to ensure the drain inside the connector maintains an open area for water flow. Reference Tee Connector - 6".


5. OUTLET CONNECTIONS

Outlet connections are used to transition the collected water from the strip drain to a 4" smooth wall PVC or 4" corrugated HDPE pipe.


- End outlets are available for 6" strip drain only. Reference End Outlet - 5A.
- Universal end outlets can be used for all strip drain widths. Reference End Outlet - 5B.
- Universal tee outlets can be used with for all strip drain widths. Reference Tee Outlet - 5C.

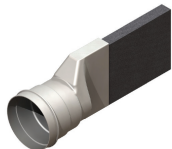


End Outlet - 5A

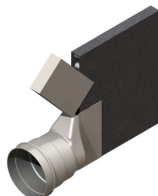


End Outlet - 5B




Tee Outlet - 5C

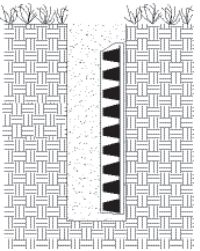


Trench -1

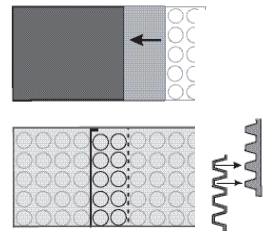

Splice - 3A

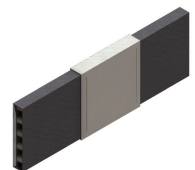

Splice - 3B

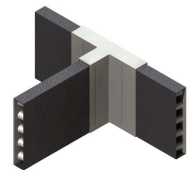


Tee Connector - 6"

*Any tape designed for underground use is acceptable provided it offers a secure bond.

TB-204

SITEDRAIN STRIP

INSTALLATION GUIDE

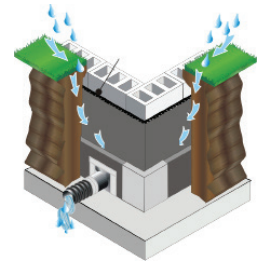



awd-usa.com | 800.242.WICK (9425)

SITEDRAIN Soil Strip Drain - Walls

SITEDRAIN Strip prefabricated drains can be used alone at the base of a wall or footer as a replacement for perforated pipe and stone drainage systems.


Install SITEDRAIN Strip in a vertical orientation at the base of the wall. Hold in place using mastic, adhesive or mechanical fasteners. Drain must be installed continuously along wall or around perimeter.

Any exposed drain ends should be sealed to prevent soil intrusion into the drainage channel.

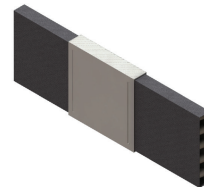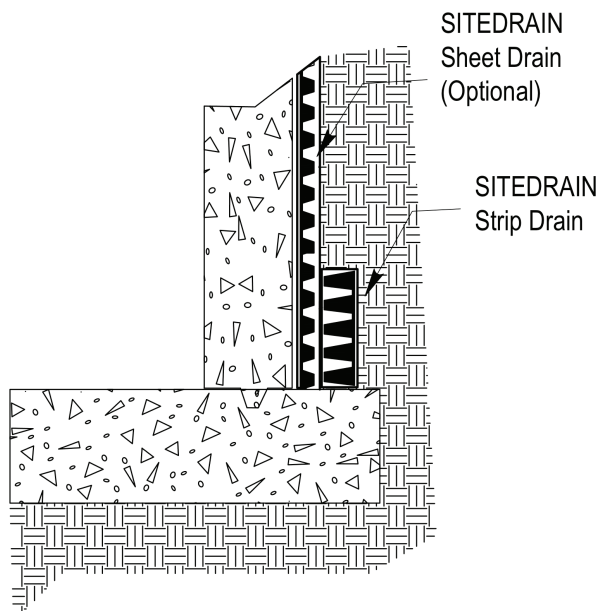


6" Splice Fitting

Connects two sections of SITEDRAIN Strip drain together. Tape edges of splice to strip drain to prevent soil intrusion into the flow channel.

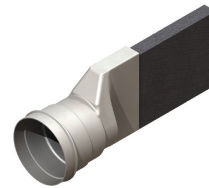

6" End Outlet

End Outlets transition collected water from Strip Drain to 4" pipe. Insert drain into Outlet. Tape fitting edges to drain to prevent soil intrusion into the flow channel.

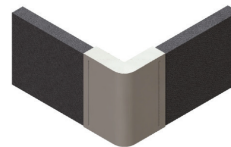

6" Corner Fitting

Maintains flow around corners. Cut drain at corner and insert each end into the fitting. Tape edges to strip drain to prevent soil intrusion into the flow channel.



AWD Fitting & Joint

Secures fittings to drain and prevents soil intrusion at seams, edges and fitting connections.

TB-204

AWD INSTALLATION DETAIL


AWD Strip Drain – Vertical Walls & Footers

SITEDRAIN Strip prefabricated drains can be used alone at the base of a wall or footer as a replacement for perforated pipe and stone drainage systems.

Install SITEDRAIN Strip in a vertical position at the base of the foundation wall. Hold in place using mastic, adhesives or mechanical fasteners. In foundation wall applications, the drain should be installed continuously around the perimeter.

Any exposed drain ends should be sealed to prevent soil intrusion into the drainage channel.

Fittings & Accessories


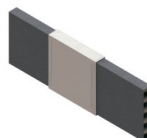


Splice

Connects two sections of SITEDRAIN Strip together. Tape edges of splice to drain to prevent soil intrusion.

End Outlet

Outlet transitions SITEDRAIN Strip to 4" pipe. Insert strip drain into outlet. Tape fitting edge to drain to prevent soil intrusion.

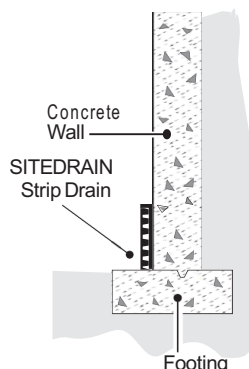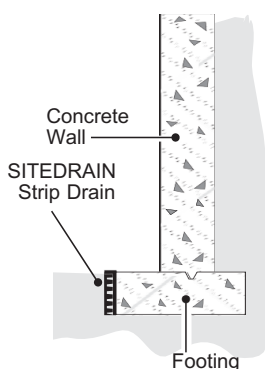

Corner Guard

Maintains flow around corners. Slit fabric, bend drain around corner and tape guard in place to prevent soil intrusion.



Fitting & Joint Tape

Used to seal drain edges to prevent soil intrusion and secure fittings before backfill.

Please contact AWD Technical Support at (800) 242-9425 with any questions.

Disclaimer: AWD assumes no liability for the accuracy or completeness of this information or for the ultimate use by the purchaser. AWD disclaims any and all express, implied, or statutory standards, warranties or guarantees, including without limitation any implied warranty as to merchantability or fitness for a particular purpose or arising from a course of dealing or usage of trade as to any equipment, materials, or information furnished herewith. This document should not be construed as engineering advice.

Installing Strip Drain in Horizontal & Slope Applications

Below are typical installation recommendations associated with installing AWD geocomposite strip drain products in horizontal or slope applications. Please contact AWD for project and/or application-specific recommendations.

Securing strip drain to a soil or aggregate base:

Use 4-6 inch long galvanized nails on approximately 15-foot spacing. Required nail length and spacing may vary depending upon the type of base to which the strip drain is being secured and desired level of security. Nails should have flat heads $\frac{1}{4}$ -inch to $\frac{3}{4}$ -inch in diameter. Nails should be placed at the center of the strip drain product and driven through the flat plastic base between rows of dimples until the nail head is flush with the top of the dimples on the strip drain product. Metal or plastic washers may be used.

Securing strip drain to an impermeable base:

For bases that cannot or should not be punctured with nails (such as polymeric liners or waterproofing membranes), the most common methods of securing are gluing, taping, or welding strip drain to the base on approximately 15-foot spacing. Adhesives with high solvent contents should be avoided as they may damage strip drain and/or impermeable base material. Strips of fabric or plastic may also be used as "belt straps", welding the belt directly to the base (per base material manufacturer recommendations) on each side of the strip drain.

Driving equipment over strip drain:

A minimum 6" of self-compacting material (such as aggregate or sand) or a minimum of 6" of compacted material (such as soil) is required to be installed over strip drain products prior to allowing heavy equipment (vehicles, dozers, etc.) to drive over strip drain.


Connecting strip drain at sides:

Using a minimum 6" overlap, place the upgradient section over the downgradient section and secure the strip drain sections to each other and the subbase using 4-6 inch long galvanized nails. Required nail length may vary depending upon the type of base to which the strip drain is being secured and desired level of security. Nail should be placed at the center of the connection area and driven through the flat plastic base between rows of dimples until the nail head is flush with the top of the dimples on the upper strip drain section. Nails should have flat heads $\frac{1}{4}$ -inch to $\frac{3}{4}$ -inch in diameter. Metal or plastic washers may be used. Additional nails may be used for additional security. Seal exposed core end(s) of connecting strip drain sections with tape or geotextile prior to backfilling. Insure intimate contact is maintained between the connected sections during backfill process.


Please contact AWD Technical Support at (800) 242-9425 with any questions.

AWD INSTALLATION DETAIL


AWD Strip Drain – Playground Applications

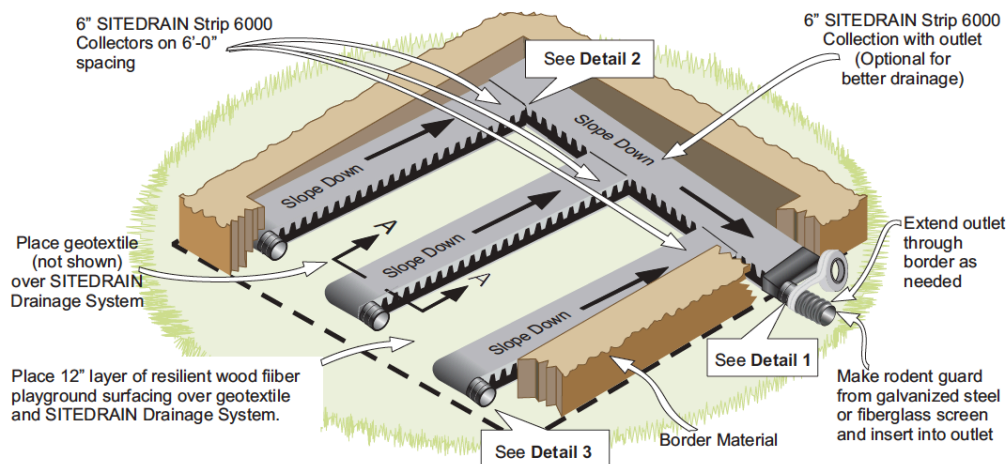

Detail 1: Outlet
Place AWD Outlet over Strip Drain

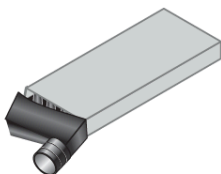


Tape to secure Outlet to Strip Drain. Snap pipe to outlet and secure with tape.

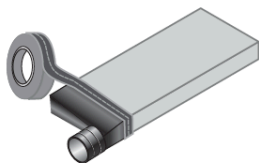


Wrap all fabric flaps tightly with duct tape or waterproof tap.

Detail 2: Strip Drain Connection


Cut slit in fabric of Collection Strip Drain to expose dimple core. Slit fabric back on connecting strip drain and expose dimple.

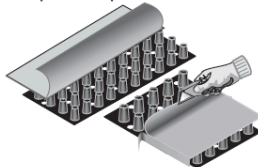

Interlock the dimples to connect the strip drains as shown.

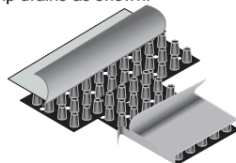

Fold back fabric and secure with tape to prevent soil intrusion

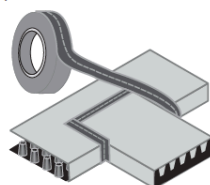


View A-A
SITEDRAIN Strip is placed with dimples up

Detail 3: End Cap

To cap end of Strip Drain, pull back fabric and cut two rows of dimples.



Wrap fabric around the end and secure with tape.

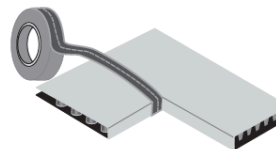


* Seal all fabric seams using duct tape or waterproof tape.

AWD INSTALLATION GUIDELINES

SITEDRAIN End & Tee Outlets

Universal Tee Outlet

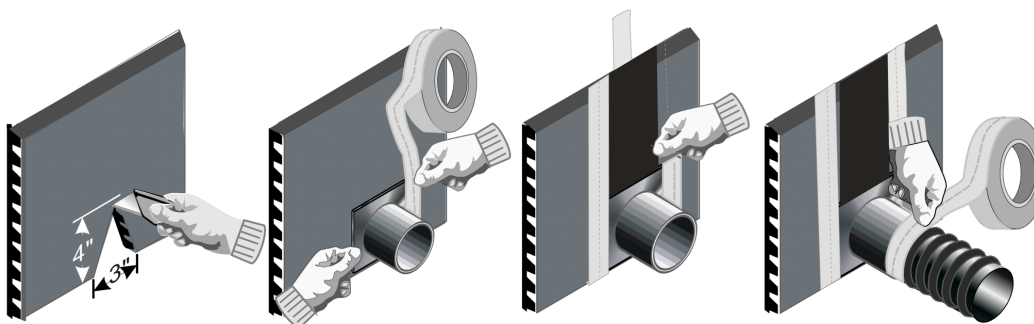

STEP #1

Use razor knife and cut a V notch in the bottom portion of the strip drain approximately 3 inches wide at the bottom and 4 inches high and discard

STEP #2

Insert fitting over notch and tape bottom of the Total-Drain.


STEP #3

Make sure all edges of fitting are covered with tape.

STEP #4

Insert pipe into fitting and secure with tape. Backfill per the pipe manufacturer recommendations.

Universal End Outlet

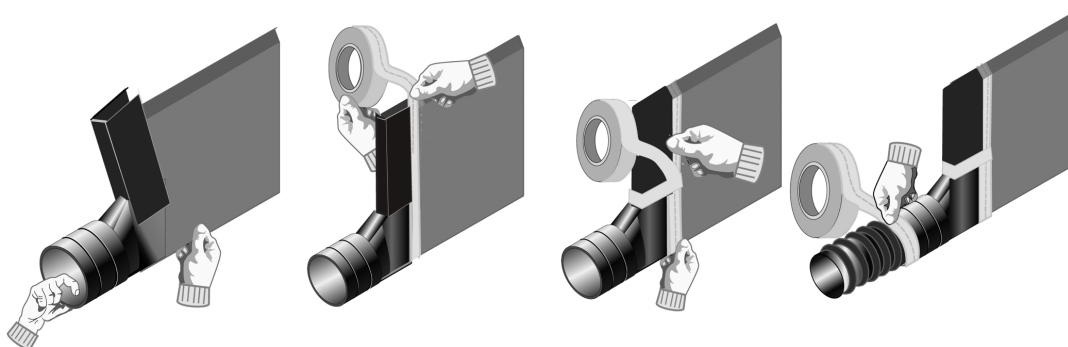

STEP #1

Place end outlet over bottom corner of strip drain with fabric up.

STEP #2

Fold fabric around exposed edge of core and tape with 3" underground tape.

STEP #3

Secure all edges with 3" tape to prevent soil intrusion

STEP #4

Insert 4" pipe into end of outlet and secure connection with 3" tape.

Please contact AWD Technical Support at (800) 242-9425 with any questions.

Disclaimer: AWD assumes no liability for the accuracy or completeness of this information or for the ultimate use by the purchaser. AWD disclaims any and all express, implied, or statutory standards, warranties or guarantees, including without limitation any implied warranty as to merchantability or fitness for a particular purpose or arising from a course of dealing or usage of trade as to any equipment, materials, or information furnished herewith. This document should not be construed as engineering advice.

Tee Outlet & End Outlet Fittings

AWD is a leading manufacturer of geocomposite drainage products in North America, with over 35 years of manufacturing experience.

AWD Tee Outlet and End Outlet fittings are designed to allow for the secure connection of AWD geocomposite drainage products to pipe drainage systems. These fittings have a double bell housing (HUB connection) to allow for connection to either a 4" Sch.40 PVC smooth pipe or 4" HDPE corrugated pipe.

Standard pipe increaser/reducer fittings, available through pipe distributors, may be used to connect to different size pipe systems. Common examples include:

- "Stepping down" to a 3" pipe using a 4" to 3" reducer bushing. The reducer bushing is inserted/cemented into the 4" HUB of the Outlet Fitting, and then the 3" pipe is attached.
- "Stepping up" to a 6" pipe using a short stub of 4" pipe inserted/cemented into the Outlet Fitting to extend the pipe beyond the fitting bell housing, with a 4" to 6" increaser then attached.


End Outlet and Tee Outlet Fittings perform the same function and can be used interchangeably based on outlet pipe system location and design. End Outlet and Tee Outlet Fittings have equivalent maximum outflow rates, which are restricted to the flow capacity of the outlet pipe being connected.

For reference, attached are product data sheets and installation guidelines for AWD Tee Outlet and End Outlet Fittings.


Please contact AWD Technical Support at (800) 242-9425 with any questions.

Disclaimer: AWD assumes no liability for the accuracy or completeness of this information or for the ultimate use by the purchaser. AWD disclaims any and all express, implied, or statutory standards, warranties or guarantees, including without limitation any implied warranty as to merchantability or fitness for a particular purpose or arising from a course of dealing or usage of trade as to any equipment, materials, or information furnished herewith. This document should not be construed as engineering advice.


WITHOUT FILTER FABRIC

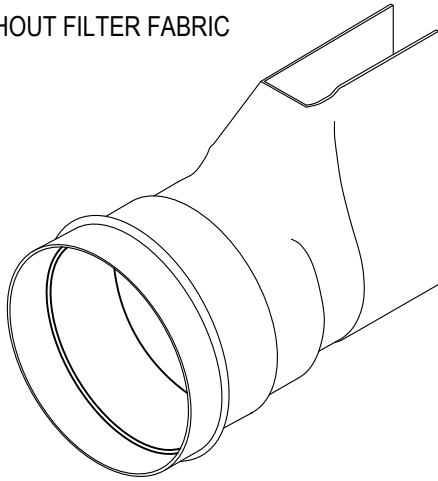

WITH INTEGRATED FILTER FABRIC
(FOR CAPPING END OF DRAIN)

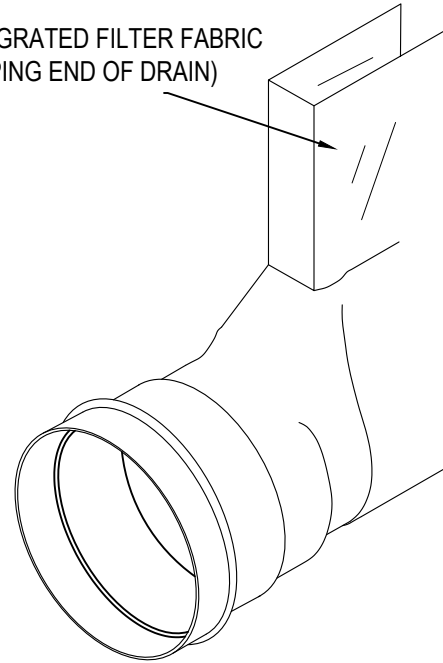

ISOMETRIC VIEWS

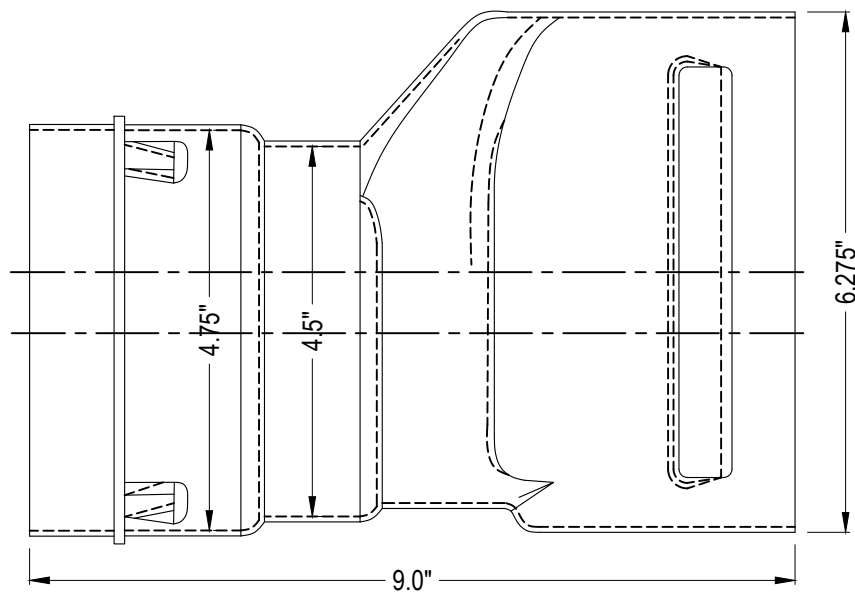

SIDE / SECTION VIEW

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWINGS.
3. MATERIAL: HDPE.
4. DOUBLE BELL HOUSING FITS 4" SMOOTH (SCH 40 PVC) PIPE OR 4" CORRUGATED (HDPE) PIPE.
5. AWD ITEM # : 20006, 20007, 20008, AND 20009



AWD - AMERICAN WICK DRAIN CORPORATION
1209 AIRPORT ROAD
MONROE, NC 28110 USA
TOLL-FREE (US/CAN): +1 800-242-9425
PHONE: +1 704-238-9200
EMAIL: INFO@AWD-USA.COM
WEBSITE: WWW.AWD-USA.COM



AWD END OUTLET FITTING DATA SHEET

PREFABRICATED GEOCOMPOSITE DRAINAGE SYSTEM

DRAWN/EDITED BY :


PROJECT :

REVISION DATE : 12/19/2018


CHECKED/APRVD BY :

SCALE :

SHEET ___ OF

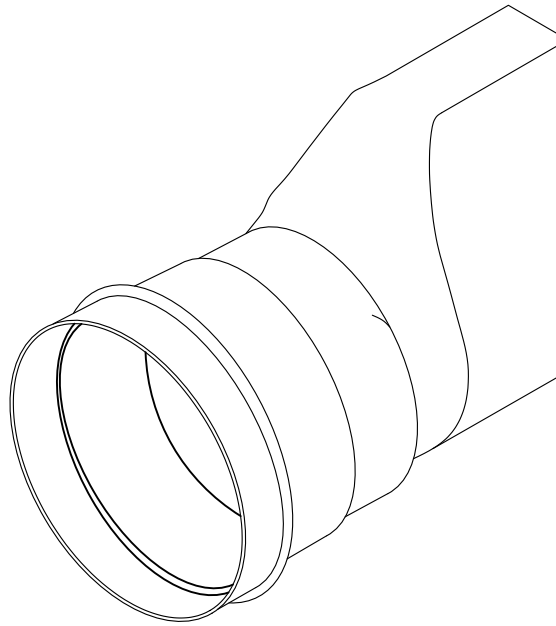

ISOMETRIC VIEW

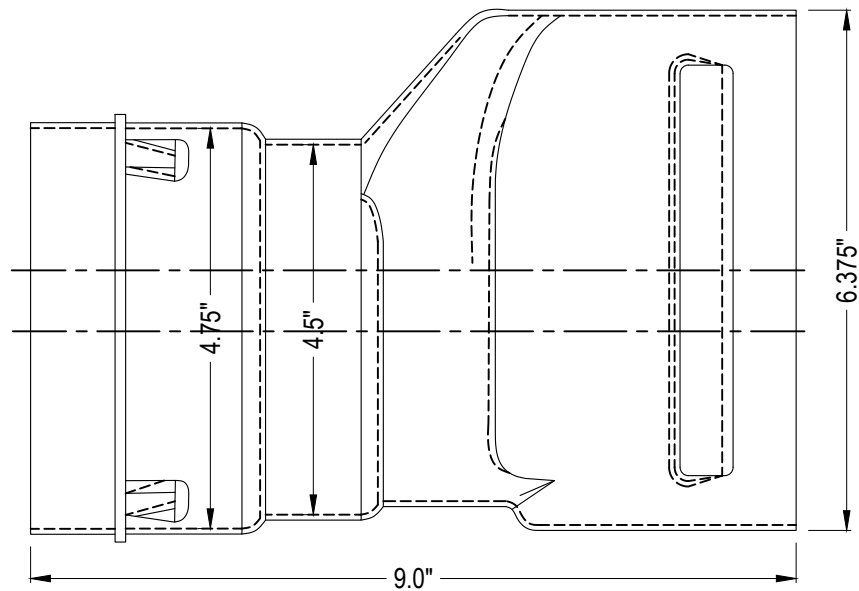

SIDE / SECTION VIEW

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWINGS.
3. MATERIAL: HDPE.
4. DOUBLE BELL HOUSING FITS 4" SMOOTH (SCH 40 PVC) PIPE OR 4" CORRUGATED (HDPE) PIPE.
5. AWD ITEM # : 20005



AWD - AMERICAN WICK DRAIN CORPORATION
 1209 AIRPORT ROAD
 MONROE, NC 28110 USA
 TOLL-FREE (US/CAN): +1 800-242-9425
 PHONE: +1 704-238-9200
 EMAIL: INFO@AWD-USA.COM
 WEBSITE: WWW.AWD-USA.COM



AWD 6" END OUTLET FITTING DATA SHEET

PREFABRICATED GEOCOMPOSITE DRAINAGE SYSTEM

DRAWN/EDITED BY :


PROJECT :

REVISION DATE : 12/19/2018


CHECKED/APRVD BY :

SCALE :


SHEET ___ OF

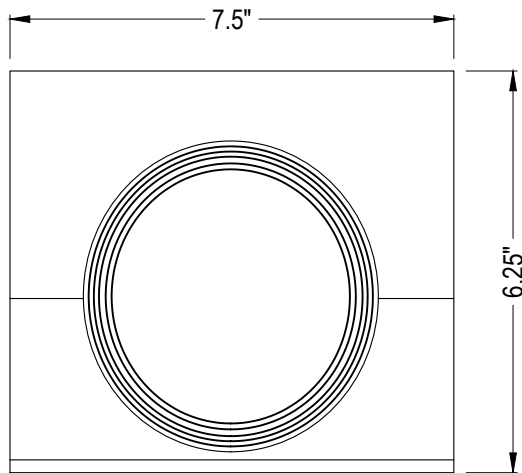


FRONT VIEW

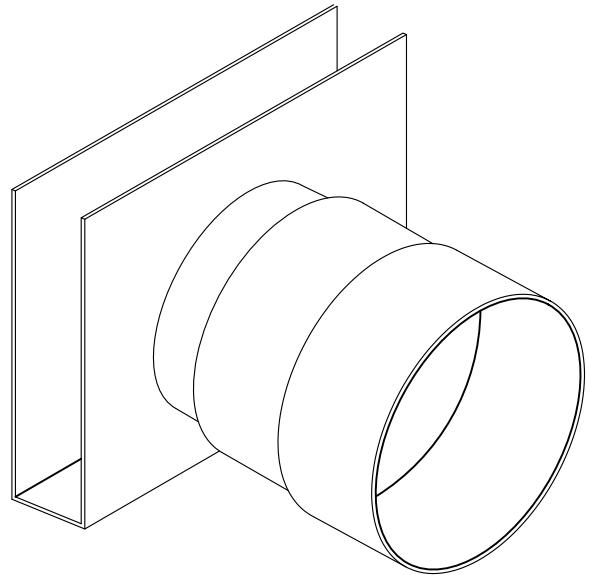

ISOMETRIC VIEW

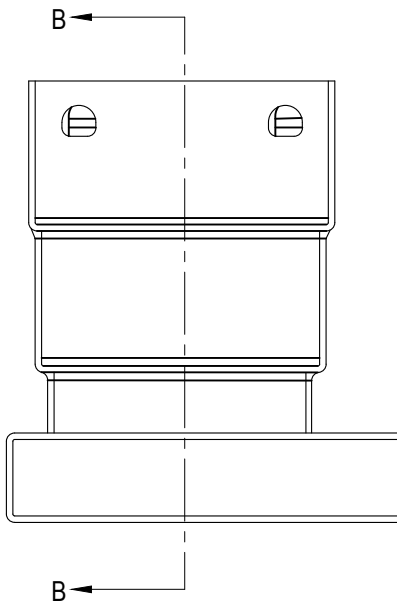

SIDE VIEW

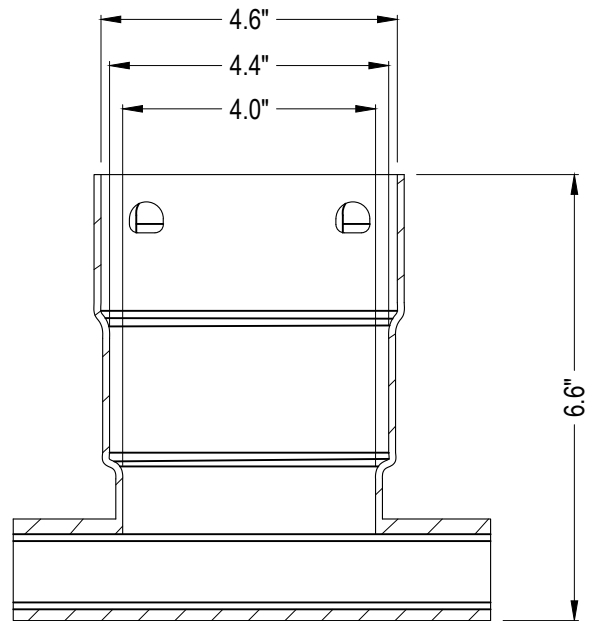

SECTION B-B

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWINGS.
3. MATERIAL: HDPE.
4. DOUBLE BELL HOUSING FITS 4" SMOOTH (SCH 40 PVC) PIPE OR 4" CORRUGATED (HDPE) PIPE.
5. AWD ITEM # : 20015, 20016, 20017, 20018, 20019, AND 20024



AWD - AMERICAN WICK DRAIN CORPORATION
1209 AIRPORT ROAD
MONROE, NC 28110 USA
TOLL-FREE (US/CAN): +1 800-242-9425
PHONE: +1 704-238-9200
EMAIL: INFO@AWD-USA.COM
WEBSITE: WWW.AWD-USA.COM



AWD TEE OUTLET FITTING DATA SHEET

PREFABRICATED GEOCOMPOSITE DRAINAGE SYSTEM

DRAWN/EDITED BY :


PROJECT :

REVISION DATE : 12/19/2018


CHECKED/APRVD BY :

SCALE :


SHEET ___ OF

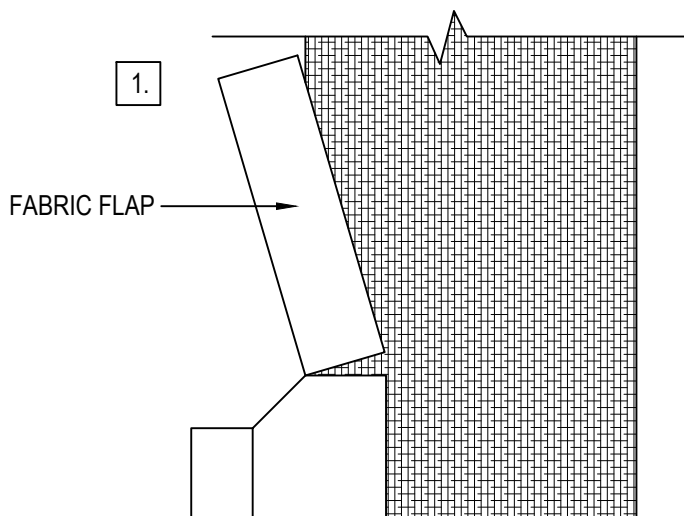


PLACE 'U'-CHANNEL OF END OUTLET FITTING AROUND BOTTOM CORNER OF GEOCOMPOSITE DRAIN WITH FABRIC FLAP EXTENDING UPWARDS.

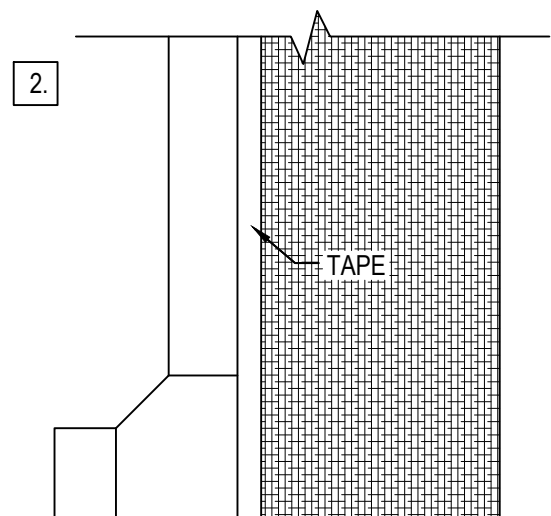

FOLD FABRIC AROUND EXPOSED EDGE OF DRAIN AND SECURE WITH AWD FITTING AND JOINT TAPE.

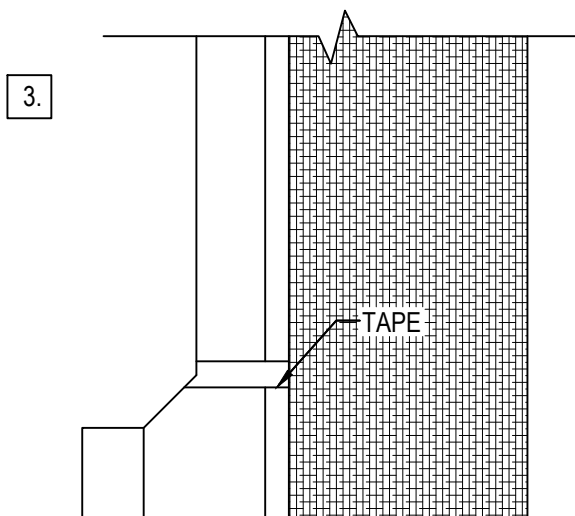

SECURE ALL FITTING EDGES WITH AWD FITTING & JOINT TAPE TO PREVENT SOIL INTRUSION.

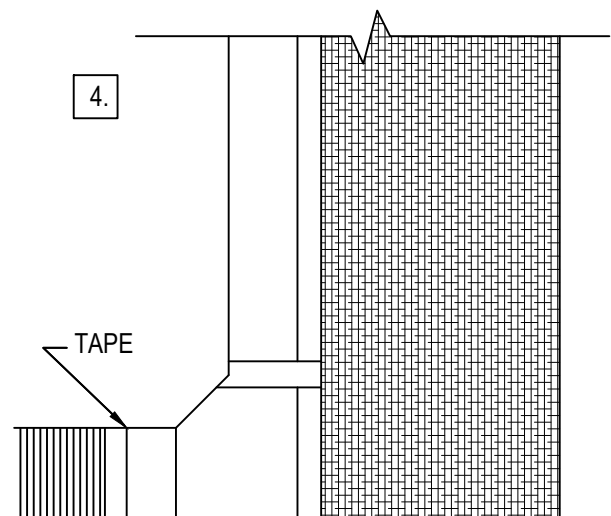

INSERT 4" PIPE INTO END OUTLET AND SECURE CONNECTION WITH AWD FITTING @ JOINT TAPE. DOUBLE BELL HOUSING ON FITTING ALLOWS SECURE CONNECTION OF 4" SMOOTH OR CORRUGATED PIPE.

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWINGS.



AWD - AMERICAN WICK DRAIN CORPORATION
1209 AIRPORT ROAD
MONROE, NC 28110 USA
TOLL-FREE (US/CAN): +1 800-242-9425
PHONE: +1 704-238-9200
EMAIL: INFO@AWD-USA.COM
WEBSITE: WWW.AWD-USA.COM



AWD END OUTLET FITTING

INSTALLATION INSTRUCTIONS

DRAWN/EDITED BY :


PROJECT :

REVISION DATE : 12/19/2018


CHECKED/APRVD BY :

SCALE :


SHEET ___ OF

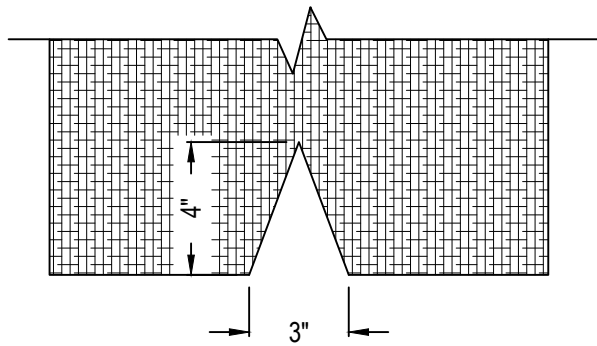


USE RAZOR KNIFE TO CUT 3"-WIDE X 4"-HIGH 'V'-NOTCH THROUGH GEOCOMPOSITE DRAIN FABRIC AND CORE AT DESIRED TEE OUTLET FITTING LOCATION. DISCARD CUT-OUT SECTION.

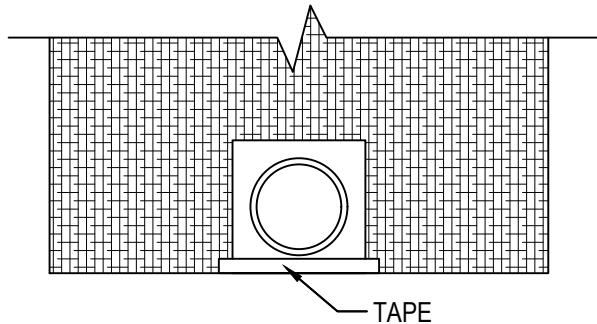

PLACE 'U'-CHANNEL OF TEE OUTLET FITTING OVER 'V'-NOTCH AND SECURE BOTTOM EDGE USING AWD FITTING & JOINT TAPE

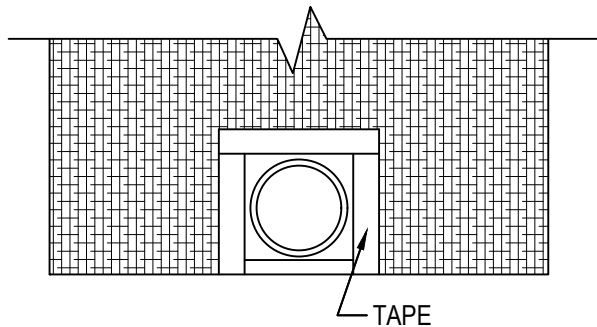

SECURE ALL FITTING EDGES WITH AWD FITTING & JOINT TAPE

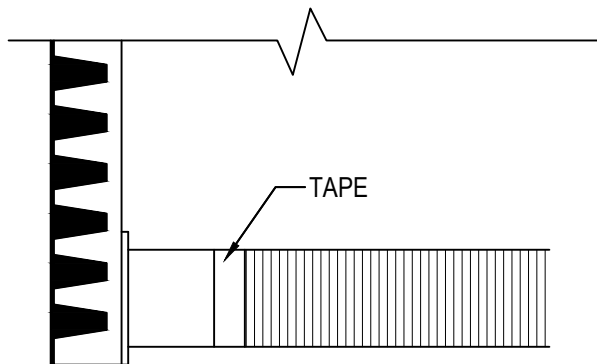

INSERT 4" PIPE INTO TEE OUTLET FITTING AND SECURE CONNECTION WITH AWD FITTING & JOINT TAPE. DOUBLE BELL HOUSING ON FITTING ALLOWS SECURE CONNECTION OF 4" SMOOTH OR CORRUGATED PIPE.

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWINGS.



AWD - AMERICAN WICK DRAIN CORPORATION
1209 AIRPORT ROAD
MONROE, NC 28110 USA
TOLL-FREE (US/CAN): +1 800-242-9425
PHONE: +1 704-238-9200
EMAIL: INFO@AWD-USA.COM
WEBSITE: WWW.AWD-USA.COM



AWD TEE OUTLET FITTING

INSTALLATION INSTRUCTIONS

DRAWN/EDITED BY :

PROJECT :

REVISION DATE : 12/19/2018

CHECKED/APRVD BY :

SCALE :

SHEET ___ OF

AWD Technical Bulletin Geo-Outlet Installation



Form a 4-inch diameter round hole in the prefabricated drain (through core and fabric) at the fitting connection location using the Geo Outlet Punch accessory or a standard utility knife.



Insert drainage collector through back of prefabricated drain.



Place All-Purpose Cement (compatible with both ABS and PVC plastic) on the portion of drainage collector that extends through prefabricated drain.



Attach retainer ring. Hand squeeze retainer ring to drainage collector to form a seal with prefabricated drain until cement sets (~10 seconds).



Place All-Purpose Cement on inside portion of drainage collector and attach 3-inch diameter SCH 40 PVC pipe. (not included).

Please contact AWD Technical Support at (800) 242-9425 with any questions.

Disclaimer: AWD assumes no liability for the accuracy or completeness of this information or for the ultimate use by the purchaser. AWD disclaims any and all express, implied, or statutory standards, warranties or guarantees, including without limitation any implied warranty as to merchantability or fitness for a particular purpose or arising from a course of dealing or usage of trade as to any equipment, materials, or information furnished herewith. This document should not be construed as engineering advice.

AWD INSTALLATION DETAIL

AWD Strip Drain – In-Line Splice

AWD manufactures various Strip Drain geocomposite drainage products, including SITEDRAIN Strip Series and ExcelDrain Strip Series products. Strip Drain products are available in 6", 12", 18", 24", and 36" roll widths. This installation detail addresses the proper in-line splicing of rolls of Strip Drain to insure a continuous and uninterrupted flow path is maintained.

1. Peel back the filter fabric on the two Strip Drains ends to be spliced, exposing the first two rows of dimples on each drainage core (FIGURE 1).
2. Interlock the exposed dimples on the upstream drainage core over the exposed dimples on the downstream drainage core (FIGURE 2A & 2B). Tap in place using a rubber mallet to secure connection.
3. Overlap filter fabric flaps and secure with 3"-wide underground-rated tape around the joint to prevent soil intrusion (FIGURE 3)

FIGURE 1

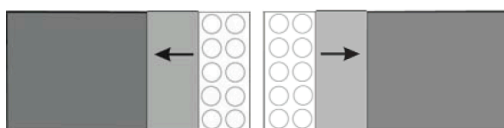


FIGURE 2A




FIGURE 2B


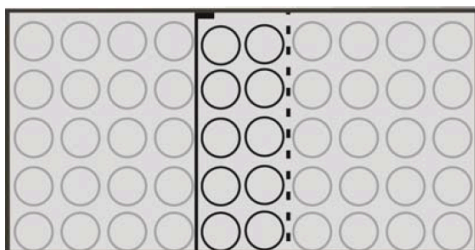


FIGURE 3

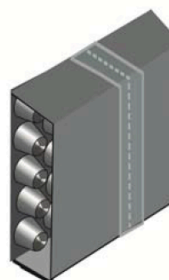

Please contact AWD Technical Support at (800) 242-9425 with any questions.

Disclaimer: AWD assumes no liability for the accuracy or completeness of this information or for the ultimate use by the purchaser. AWD disclaims any and all express, implied, or statutory standards, warranties or guarantees, including without limitation any implied warranty as to merchantability or fitness for a particular purpose or arising from a course of dealing or usage of trade as to any equipment, materials, or information furnished herewith. This document should not be construed as engineering advice.

AWD INSTALLATION DETAIL

AWD Strip Drain – End Cap

AWD manufactures various Strip Drain geocomposite drainage products, including SITEDRAIN Strip Series and ExcelDrain Strip Series products. Strip Drain products are available in 6", 12", 18", 24", and 36" roll widths. This installation detail addresses the proper method of capping the end of rolls of Strip Drain.

1. At Strip Drain end to be capped, peel back the filter fabric exposing the first two rows of drainage core dimples, using care to avoid tearing fabric (FIGURE 1).
2. Cut off and discard the exposed drainage core dimples using a utility knife or shears (FIGURE 2).
3. Fold filter fabric flap over trimmed end of drainage core (FIGURE 3).
4. Secure filter fabric flap with 3"-wide underground-rated tape to prevent soil intrusion (FIGURE 4).

FIGURE 1

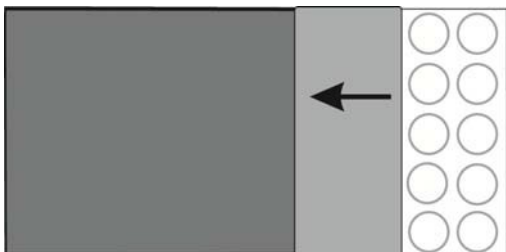


FIGURE 2

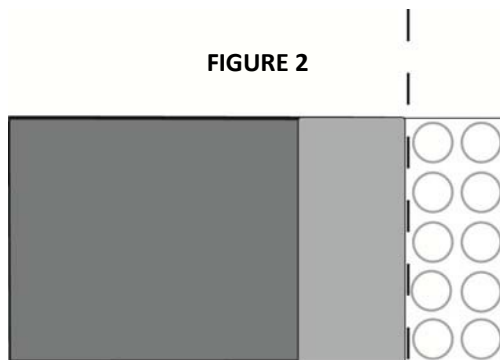


FIGURE 3

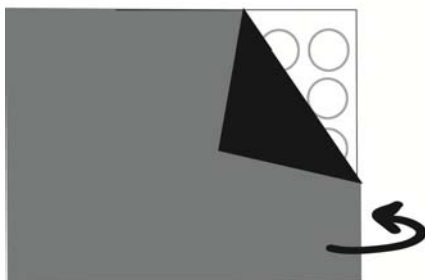


FIGURE 4



Please contact AWD Technical Support at (800) 242-9425 with any questions.

Disclaimer: AWD assumes no liability for the accuracy or completeness of this information or for the ultimate use by the purchaser. AWD disclaims any and all express, implied, or statutory standards, warranties or guarantees, including without limitation any implied warranty as to merchantability or fitness for a particular purpose or arising from a course of dealing or usage of trade as to any equipment, materials, or information furnished herewith. This document should not be construed as engineering advice.


AWD INSTALLATION DETAIL

SITEDRAIN Strip Drain – Tee Connection Instructions

A 6" Tee Connector is available to join one run or branch of SITEDRAIN Strip Drain to another.

For 6" strip drain, insert ends of strip drain 2" into each tee connector input. The ends of the strip will be held in place by the retaining clips built into the tee connector. Secure the joints with 3" wide underground tape to prevent soil intrusion.

For 12"-36" strip drain, two 6" tee connectors will be needed for each joint. Using a standard utility knife, cut the top off each 6" tee connector. Slide one tee connector over the bottom and one tee connector over the top of the three strips to be joined, making sure each strip is inserted 2" into each tee connector input. Secure all strip drain joints with 3" wide underground tape to prevent soil intrusion.

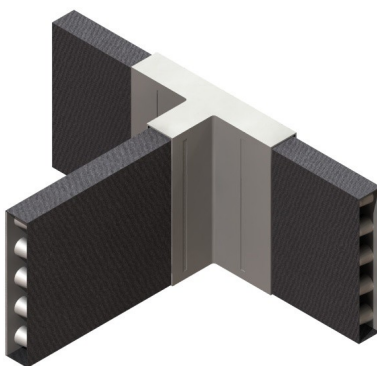


Please contact AWD Technical Support at (800) 242-9425 with any questions.

Disclaimer: AWD assumes no liability for the accuracy or completeness of this information or for the ultimate use by the purchaser. AWD disclaims any and all express, implied, or statutory standards, warranties or guarantees, including without limitation any implied warranty as to merchantability or fitness for a particular purpose or arising from a course of dealing or usage of trade as to any equipment, materials, or information furnished herewith. This document should not be construed as engineering advice.

AWD INSTALLATION DETAIL

AWD Strip Drain – Step Down Instructions

1. Install SITEDRAIN Strip Drain along the upper footing as shown.
2. At the step down, extend the drain beyond the edge of the step to the width of the drain.
3. Slit the fabric of the strip drain at the bottom to expose dimples that extend beyond the step down.
4. Cut a piece of drain the length of the step down.
5. Peel fabric back to expose the dimples on the top end of the step down and interlock with the section of drain that extends beyond the upper step. Cover connection with fabric flap and tape to prevent soil intrusion.
6. To continue horizontal installation, cut a slit the width of the drain of the step down drain section. Expose the dimples of the continuing drain and repeat the interlocking with the step down section of drain to maintain flow.

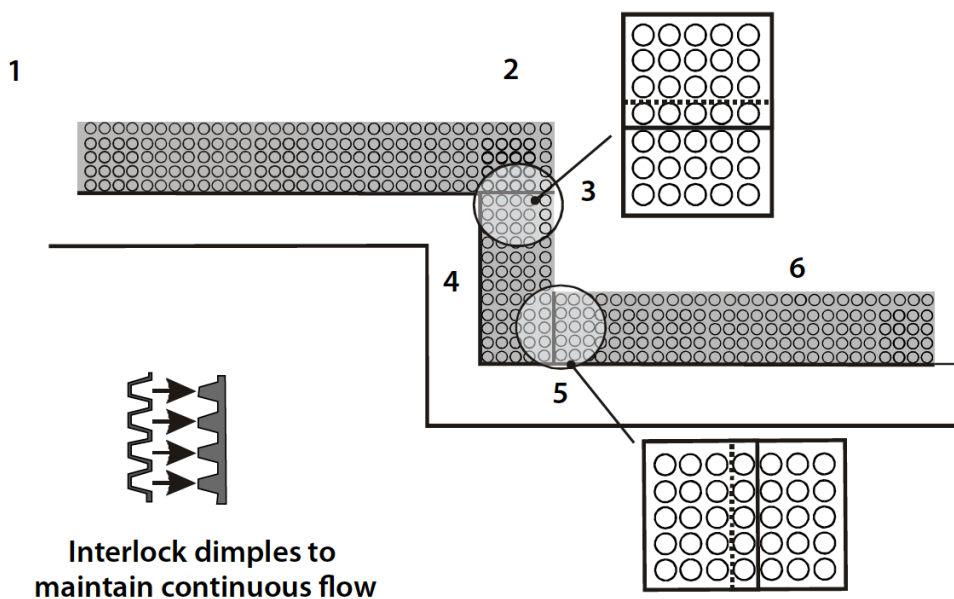

Please contact AWD Technical Support at (800) 242-9425 with any questions.

Disclaimer: AWD assumes no liability for the accuracy or completeness of this information or for the ultimate use by the purchaser. AWD disclaims any and all express, implied, or statutory standards, warranties or guarantees, including without limitation any implied warranty as to merchantability or fitness for a particular purpose or arising from a course of dealing or usage of trade as to any equipment, materials, or information furnished herewith. This document should not be construed as engineering advice.

Geocomposite Handling Requirements

The following are manufacturer requirements for the delivery, storage, and handling of American Wick Drain Corporation (AWD) geocomposite drainage products.

PACKAGING & SHIPPING:

- AWD offers the following packaging and shipping options for geocomposite drainage products
 - Rolls palletized and banded (standard/default shipping method)
 - Rolls loose (upon request)
 - Rolls loose in UV-resistant bags (upon request)

DELIVERY:

- Materials shall be delivered in original, unopened, undamaged packaging bearing manufacturer's name and product identification
- Care must be taken during unloading process to insure materials are not damaged
- Materials shall remain in original packaging until time of installation

STORAGE:

- Store materials in protected environment until time of installation
 - Materials not shipped in UV-resistant bags must be stored indoors or under separate UV-protective cover to protect materials from exposure to direct sunlight
 - UV-resistant bagged materials may be stored in outdoor UV-exposed environments for a cumulative maximum of 180 days

INSTALLATION:

- Limit unpackaged material UV exposure to a cumulative maximum of 14 days during installation
- Do not install materials during high wind events
- Do not install materials when ambient temperatures are below 20 degrees Fahrenheit or above 100 degrees Fahrenheit
- Do not expose materials to chemicals that are strong acids, strong bases, or high in solvents content
- Protect materials from site construction damage, flames, and other environmental conditions that may damage the materials

Please contact AWD Technical Support at (800) 242-9425 with any questions.

Disclaimer: AWD assumes no liability for the accuracy or completeness of this information or for the ultimate use by the purchaser. AWD disclaims any and all express, implied, or statutory standards, warranties or guarantees, including without limitation any implied warranty as to merchantability or fitness for a particular purpose or arising from a course of dealing or usage of trade as to any equipment, materials, or information furnished herewith. This document should not be construed as engineering advice.

Geocomposite Drainage Product Temperature Guidelines

AWD geocomposite drainage products are installed in a variety of applications and conditions. This technical bulletin addresses installation and operational temperature recommendations and restrictions.

Installation Temperature Recommendations:

AWD recommends geocomposite drainage products not be installed when the ambient temperature is below 20°F or above 100°F.

Operational Temperature Restrictions:

AWD geocomposite drainage products should not be installed in applications where the long-term operational temperature is expected to be below -20°F or above 150°F.

Hot-Applied Layer Restrictions:

AWD does not recommend hot-applied layers (i.e. asphalt, hot-mix setting beds, etc.) with application temperatures greater than 200°F be applied directly in contact with geocomposite drainage products.

In instances where the application temperature is above 200°F, AWD recommends a protective layer (such as an asphaltic protection board) or minimum 1"-thick sand layer be used between the geocomposite drain and the hot-applied layer.

Please contact AWD Technical Support at (800) 242-9425 with any questions.

Disclaimer: AWD assumes no liability for the accuracy or completeness of this information or for the ultimate use by the purchaser. AWD disclaims any and all express, implied, or statutory standards, warranties or guarantees, including without limitation any implied warranty as to merchantability or fitness for a particular purpose or arising from a course of dealing or usage of trade as to any equipment, materials, or information furnished herewith. This document should not be construed as engineering advice.



Bowman
Construction
Supply Inc.



Quick
Supply Co.



Cascade
GEOSYNTHETICS

LOCATIONS & CONTACT INFO

ASP ENTERPRISES

aspent.com
salesasp@aspent.com

BOWMAN CONSTRUCTION SUPPLY

bowmanconstructionsupply.com
salesbcs@bowmanconstructionsupply.com

QUICK SUPPLY CO.

quicksupplyco.com
salesquick@quicksupplyco.com

CASCADE GEOSYNTHETICS

cascadegeos.com
salescascade@cascadegeos.com

St. Louis, MO 636.343.4357
Omaha, NE 402.861.8579
Kansas City, MO 816.554.1191
Wichita, KS 316.393.1554

Denver, CO 303.696.8960
Colorado Springs, CO 719.257.7840
Loveland, CO 970.535.0863

Des Moines, IA
515.289.1271

Portland, OR
971.339.1020

SOLUTIONS WE SUPPLY

GEOSYNTHETICS

Filter Fabrics

Stabilization Fabrics

Geogrids

- Road Grids
- Wall Grids
- Slope Stabilization

Specialty Fabrics

Composite Geomembranes

- GCLs, PVC, HDPE, LLDPE, EPDM, Granular Bentonite

SEDIMENT CONTROL

Inlet Protection

- Grated Inlet, Curb Inlet, Area Inlet Protection

Ditch Checks

- Triangle Silt Dike
- GeoRidge

Perimeter Protection

- High and Low-Porosity Silt Fence, Straw Wattles, Silt Socks
- Safety Fence

Flocculants & Water Treatment

- Polymer-Based & Natural Flocculants

Sediment Basin Skimmers

Dewatering Bags

Trackout Control

- FODS
- Rumble Grates

Turbidity Curtains

EROSION CONTROL

Basic Hydraulically Applied Mulches

- Wood
- Paper
- Blends
- Straw

High-Performance Hydraulically

Applied Products

- BFM
- FGM
- Additives & Tackifiers

Temporary Erosion Control Blankets

- Coir & Jute Mat/Nettings
- Short-Term ECBs
- Extended-Term ECBs

Permanent Erosion Control Blankets

- Turf Reinforcement Mats
- HP-TRMs
- Anchor Reinforced Vegetation System

Structural BMPs

- Transition Mats
- Geoweb Cellular Confinement
- Composite Vegetated Armor System
- Flex MSE Vegetated Wall System
- Articulated Concrete Block
- Gabions
- Grout-Filled Geotextile Mats

Vegetation Establishment

- Native Seed & Turf Seed
- Fertilizers
- Organic Soil Additives
- Stratavault Soil Cells

STORMWATER MANAGEMENT

Water Quality

- Inlet Filter Boxes
- Pre-Treatment Chamber
- Nutrient Separating Baffle Boxes
- High-Flow Biofiltration Media
- Hydrodynamic Separators
- Stratavault

Water Quantity

- Modular Underground Storage Systems
- Chamber Detention Systems

Drainage

- HDPE Swale Liner
- Pipe & Fittings
- Drainage Composites
- Strip Drain

Inlet Structures

- PVC
- Drain Basins, In-Line Drains
- Landscape

Permeable Pavers

- Permeable Articulating Concrete Block
- Grass Pavers
- Gravel Pavers
- Concrete Pavers

SPECIALTY

Natural & Synthetic Coir Fiber Logs

Vegetated Reinforced Soil Slopes

Soil Anchors

Root Barrier System

AquaBlok

Muscle Wall

We are full line distributors of construction materials for all project types. Contact us for assistance with a project. From specification and development to installation and completion, we're here to help with all of your site solution needs.

GEOSYNTHETICS | EROSION CONTROL | STORMWATER MANAGEMENT
SEDIMENT CONTROL | REVEGETATION & SOIL AMENDMENTS